AXIS-ALIF

ANTERIOR LUMBAR INTERBODY FUSION SYSTEM

DISASSEMBLY INSTRUCTIONS

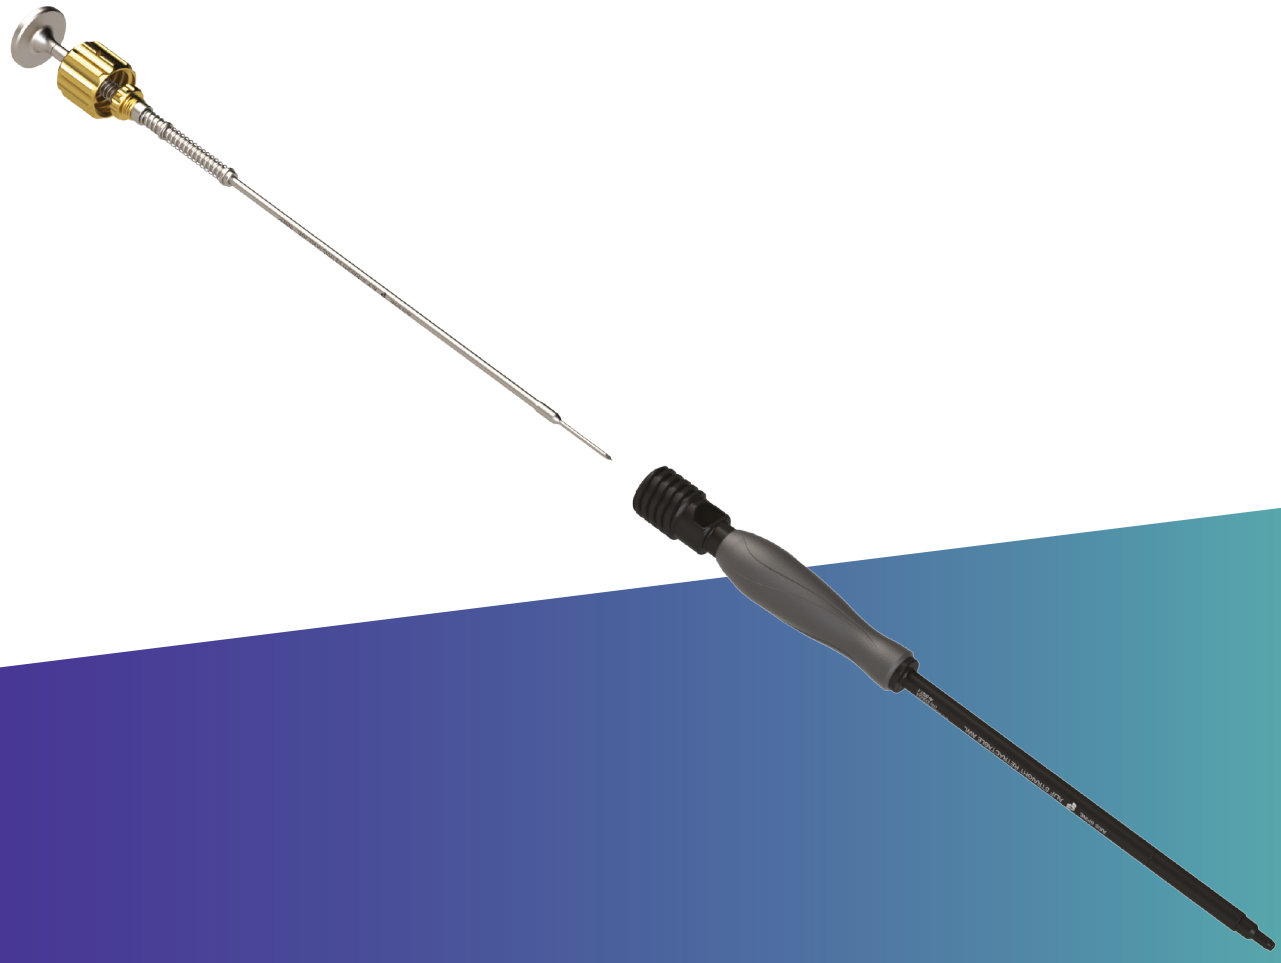

AXIS SPINE TECHNOLOGIES

ANGLED RETRACTABLE AWL (AI-5025.X)

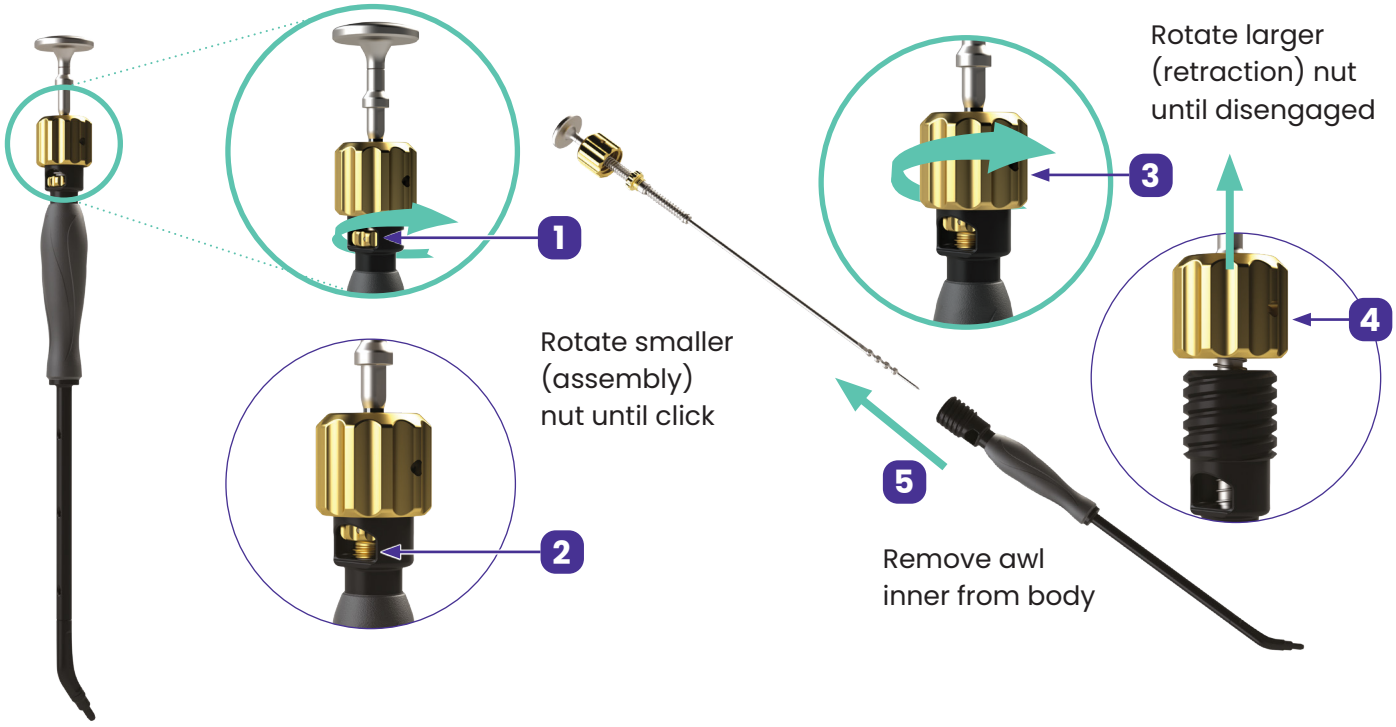

STRAIGHT RETRACTABLE AWL (AI-5027.X)

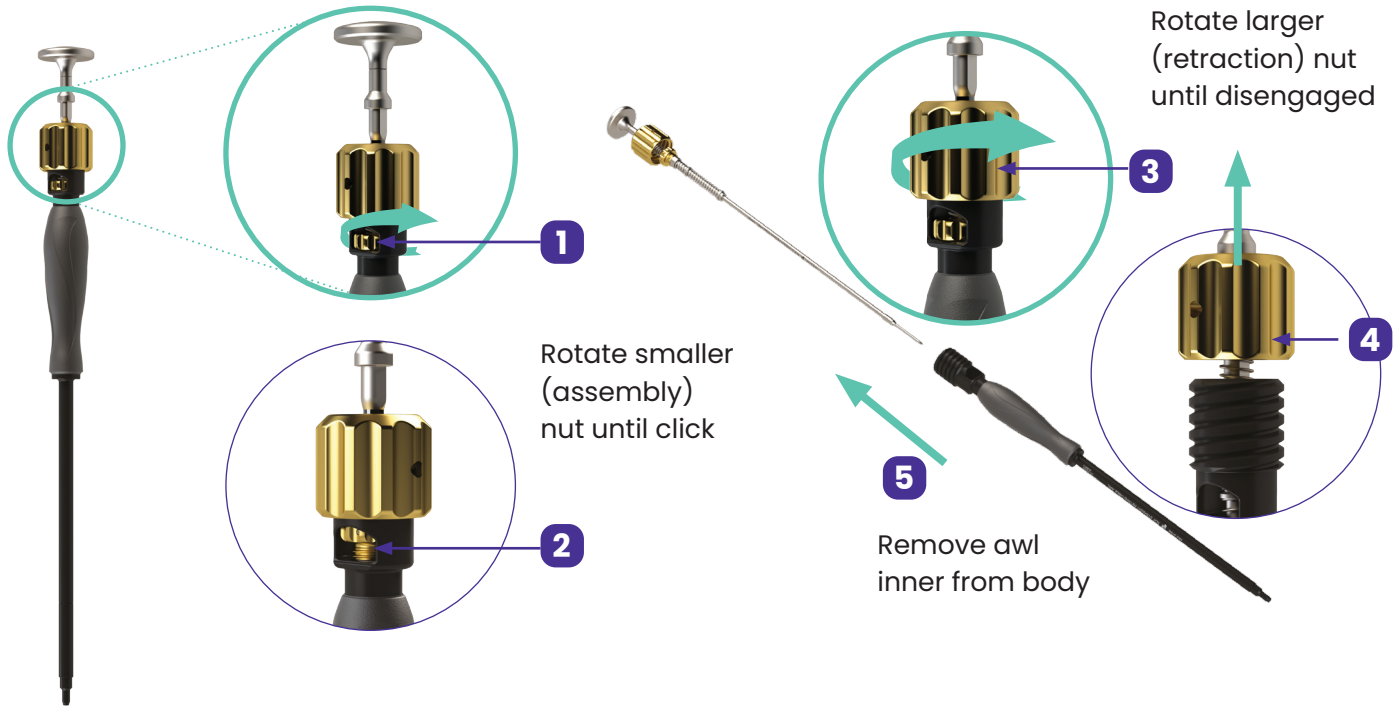

SMALL (AI-6010) & MEDIUM (AI-6012) GRAFT SYRINGES

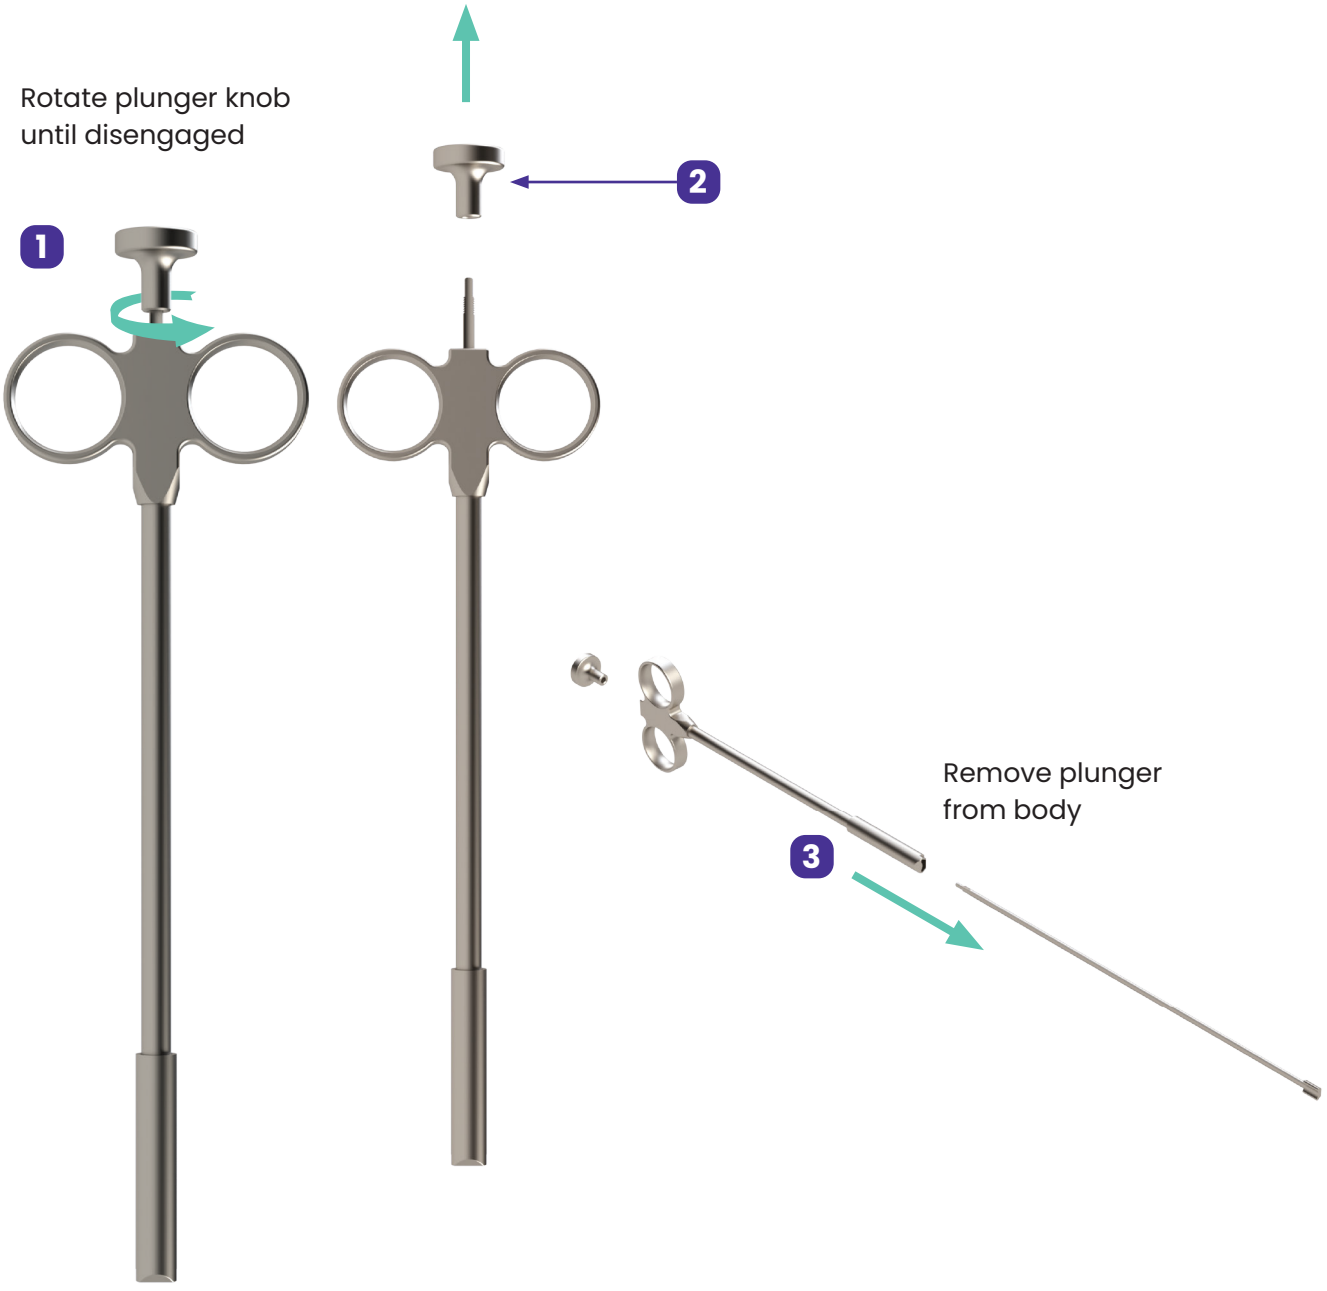

IMPLANT EXTRACTOR TOOL (A6120X00)

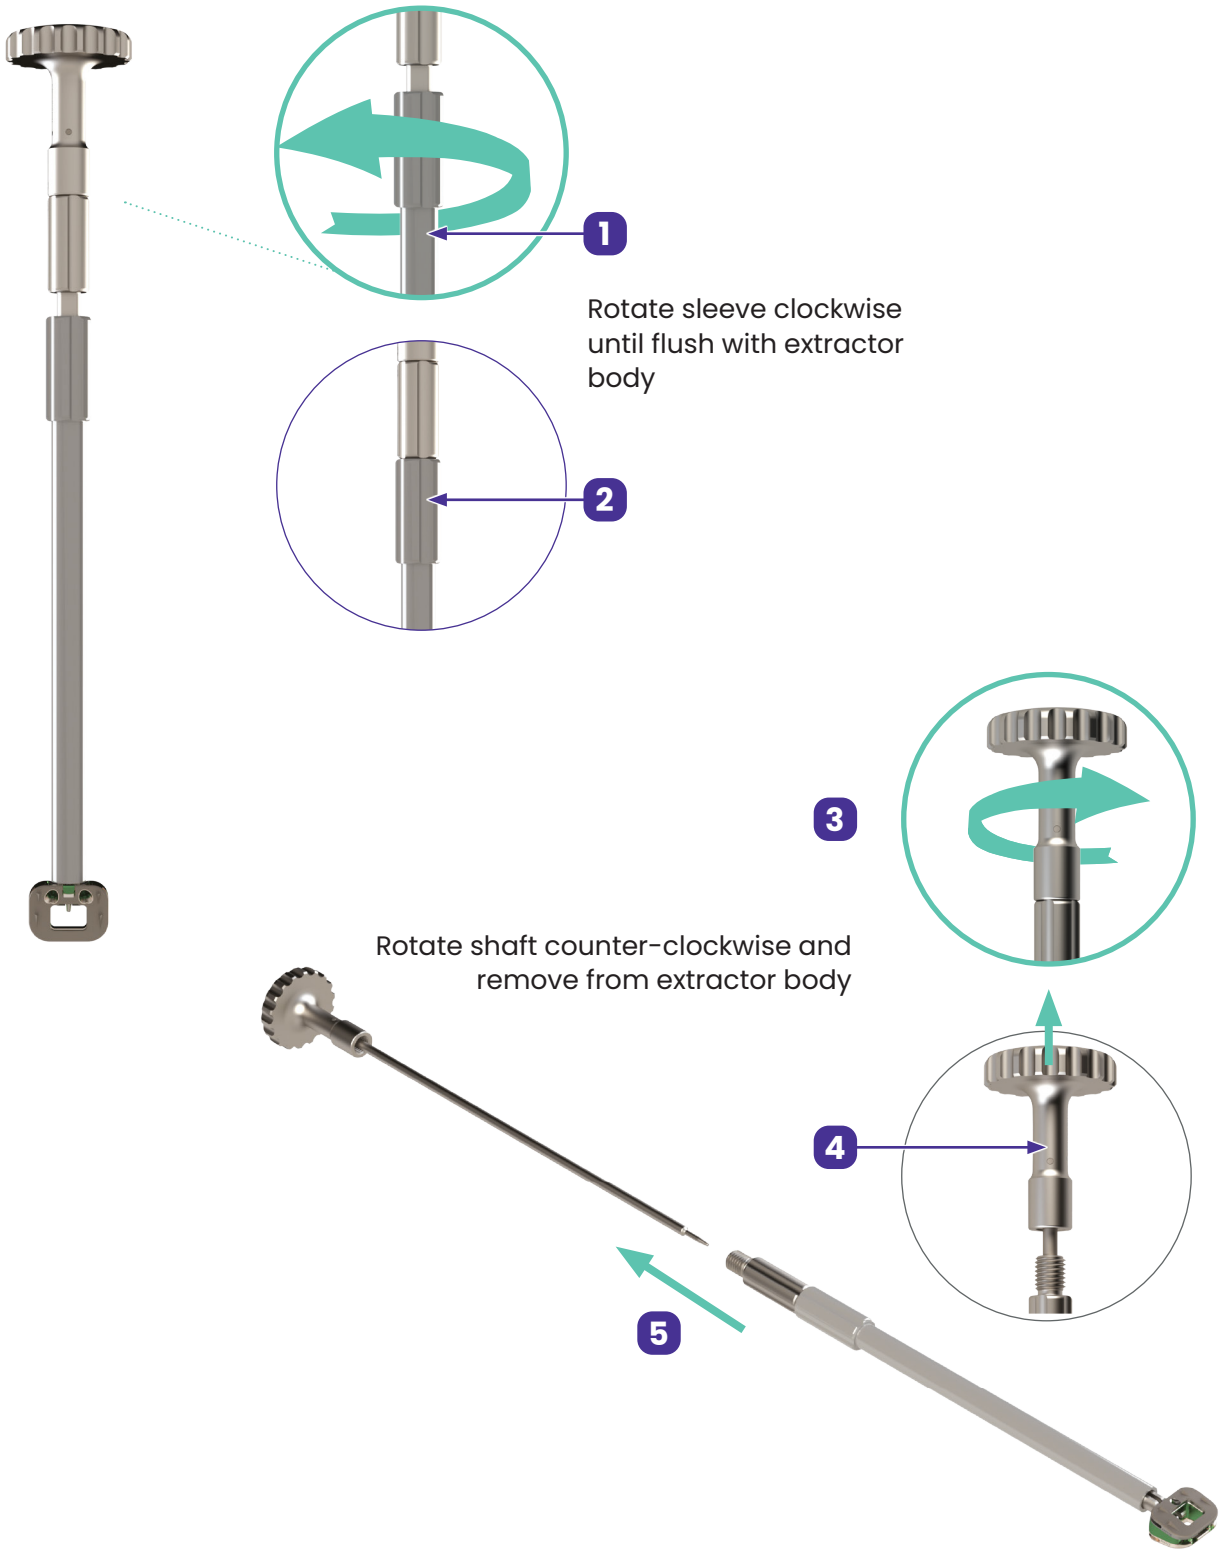

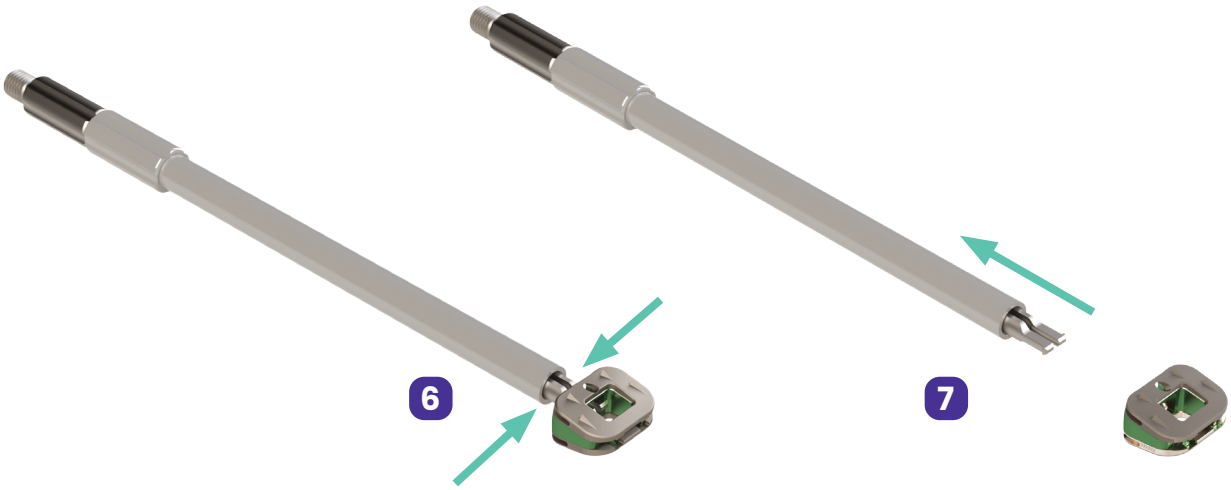

Pinch the ends of the extractor body to disengage from the implant

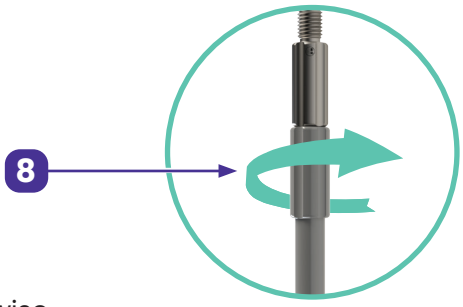

Rotate the sleeve counterclockwise and remove from the shaft

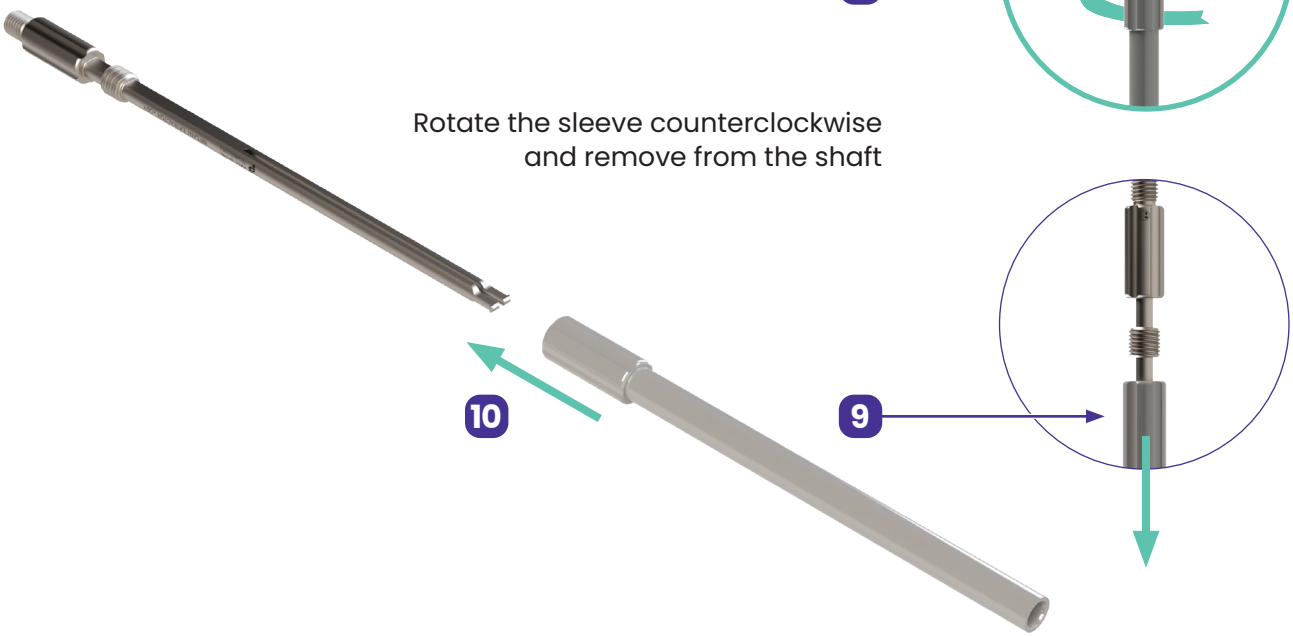

IMPLANT EXTRACTOR (AI-7000.X)

1 Rotate Extractor Sleeve nut counter-clockwise once to remove pre-load on implant

2 Push Extractor Body locking nut down, twist and release to unlock

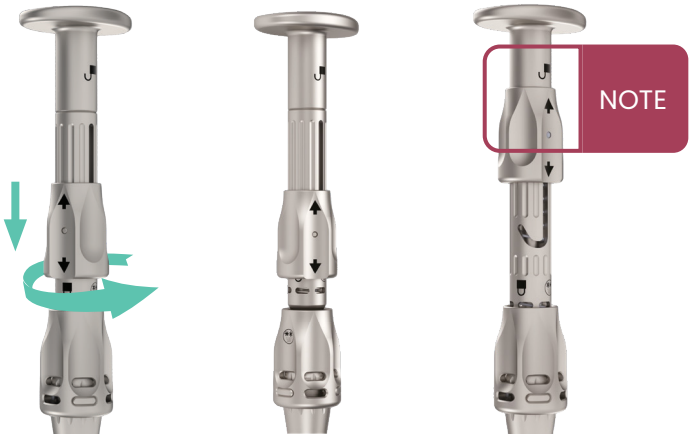

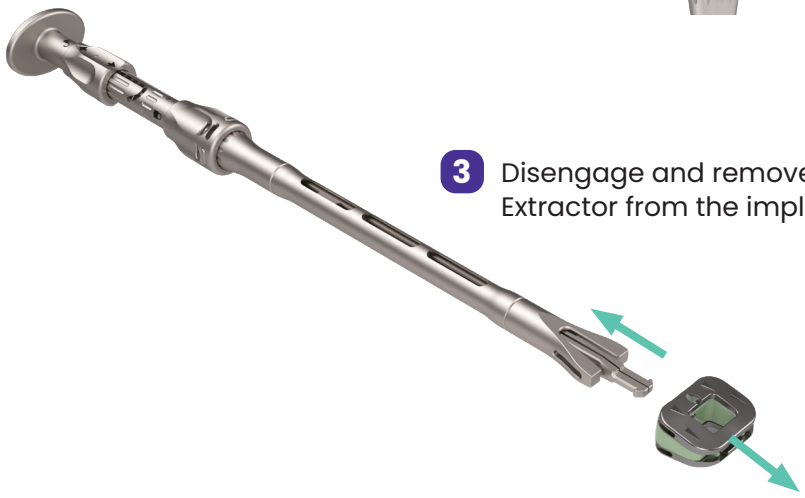

3 Disengage and remove Extractor from the implant

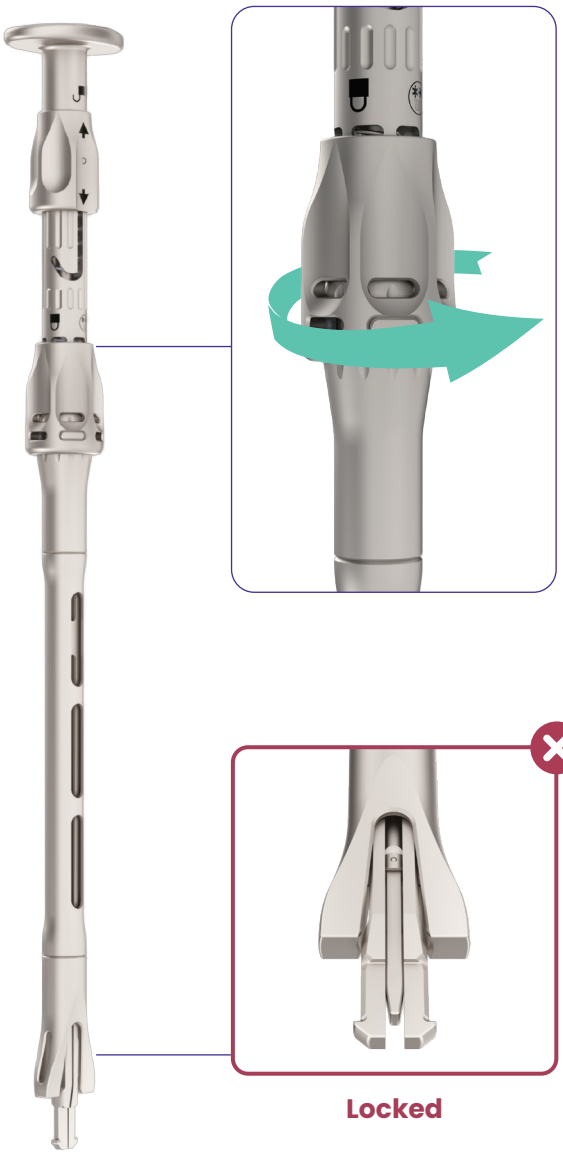

4 Rotate Extractor Sleeve nut counter-clockwise until fully unlocked

Locked

Unlocked

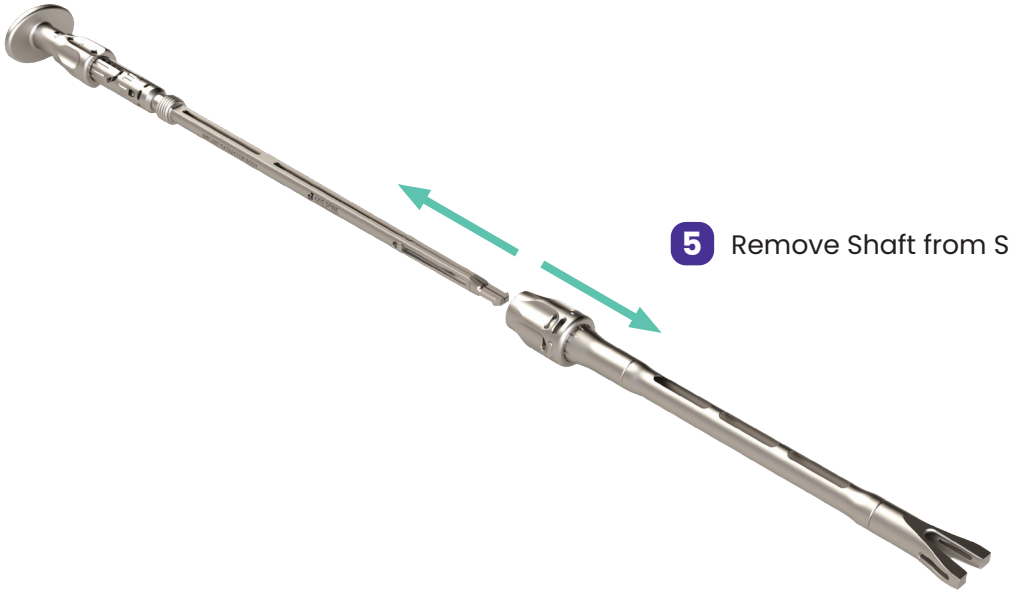

5 Remove Shaft from Sleeve

AXIS SPINE TECHNOLOGIES

Serviced through:
Kuro by One Life Sciences, Inc.
7625 Golden Triangle Dr. Ste G
Eden Prairie, MN 55344
+1 (612) 234-5174

logistics@axisspinetech.com
axisspinetech.com

PI-0016.A

Manufactured by:
Axis Spine Technologies Ltd.
Century Offices, 2175 Century Way
Thorpe Park, Leeds, LS15 8ZB
UK

Axis Spine Technologies Design and the Axis Spine Logo are registered trademarks of Axis Spine Technologies Ltd.

© Axis Spine Technologies Ltd. 2026.
All rights reserved.